

Although our floors are designed with easy care in mind, all floors require routine care and preventative maintenance for sustained beauty and performance. The recommendations below are provided in accordance with guidelines required to maintain the coverage of the limited warranties and will prolong the life of the installed flooring.

Preventative Maintenance

Exterior Mats

- Place exterior mats outside all exterior entrances.
- Exterior mats should be constructed of dual fibers: soft fibers capable of absorbing moisture and coarse fibers to remove dirt and grime from shoe soles.
- To allow time for cleaning, purchase two sets of exterior mats. Place one set at all exterior entrances to reduce the amount of dirt, grit, and moisture tracked into the home. When it's time for cleaning, remove the soiled set and immediately replace with the fresh set.
- Cleaning mats routinely prevents them from becoming a soil source.

Interior Mats

- Place interior mats inside all exterior entrances to capture any residual dirt, grit, or moisture missed by exterior mats.
- They should be constructed of an absorbent fiber with a breathable, non-staining back.
- Remember to routinely clean both sides of interior mats so they don't become a secondary source of soil, and also clean underneath to prevent soil and grit from becoming trapped and dulling the finish of the flooring.
- Do not use rubber mats, which may stain the floor.

Furniture

- Use non-staining felt or plastic floor protectors at least one inch in diameter under furniture.
- Chair casters should be rubber, not plastic or metal.
- Routinely clean casters to remove grit.
- Lay plywood over the floor to avoid dents and gouges and use a furniture dolly when moving heavy appliances and furniture.

Other Preventative Measures

- Keep pet nails trimmed to minimize scratches.
- Protect flooring from spiked heels, athletic shoes or shoes in need of repair.
- Routinely clean vacuum wheels, brush and head, and periodically inspect for foreign objects.
- Close window treatments during hours of direct sunlight and minimize excessive lighting whenever possible to protect floor.
- Exercise caution when placing area rugs over floors with radiant heating. Rugs may increase flooring temperatures beyond recommended levels and void the warranty.

Routine Care

The amount of daily usage will determine how often cleaning is required.

Day to Day Cleaning

- Dust mop, sweep and/or vacuum the floor regularly to remove any particles that could scratch the floor.
- **WARNING:** Vacuums with beater bar or power rotary brush head should never be used on laminated wood flooring.
- Use vacuum tools designed for hard surfaces.
- Use a microfiber mop for dust mopping. Pay close attention to mop head. Once soiled, replace with a fresh one. Launder soiled mop heads without fabric softener. Fabric softener residue may cause streaking on the floors.

Occasional Cleaning

- Occasionally wet mop with water only, using a well wrung out mop.
- If needed, use 1 cup of vinegar per gallon of water OR 1/3 cup non-sudsing ammonia per gallon of water.
- Never steam mop laminated wood flooring.
- Flood mopping is never recommended since mop water may damage flooring and leave spots.
- Do not pour liquid directly on the floor or use an excessively wet mop.
- Do not allow liquid to puddle or leave moisture standing on the floor.
- Allow floor to dry completely before replacing interior mats.

Cleaning Spills

- Remove spills promptly. Do not allow topical moisture to remain on the floor.
- Immediately use an absorbent cloth to remove as much of the liquid as possible.
- Mist a clean microfiber cloth and rub the area, working from the outside of the area toward the center.
- Take care to wipe the surface thoroughly.
- To reduce spotting, do not allow liquids to stand or remain on the surface of the flooring.

Spot Removal

- Immediately use a microfiber cloth and rub the area, working from the outside of the stain toward the center.
- Take care to wipe the surface thoroughly.
- Do not allow liquids to stand or remain on the surface of the flooring to reduce spotting.

Products and Tools to Avoid

- Do not use oil soaps, wax, detergents, abrasive cleaners, polishes, or other household products to clean the floor.
- Vacuums with beater bar or power rotary brush head should never be used on laminated wood flooring.
- Never use power scrubbers to clean the floor.

For installation, maintenance and technical questions please contact mohawkhomecenters_costco@mohawkind.com or call 888-459-9220.

Mohawk laminate flooring is manufactured and distributed by:

Unilin Flooring North America LLC

550 Cloniger Drive

Thomasville, NC 27360